

READ AND UNDERSTAND ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING FIXTURE!

CATALOG # : WD1340J


SAVE THESE INSTRUCTIONS


- Danger: Always disconnect power before wiring, or maintenance. Fixture must be installed by a qualified electrician. Do not install in locations where water collects and/or stands for prolonged periods of time. Fixture must always be installed according to local and national electrical codes, rules & regulations. Fixture must be installed on a circuit protected by Ground Fault Circuit Interrupter (GFCI).
- Warning: The joint MUST be sealed between the mounting surface (e.g., wall, ground, ceiling, etc.) and the fixture with an appropriate sealing / caulking compound to provide a watertight seal. Seal all conduit opening(s) and opening(s) from water entry. Before service ensure fixture is cool to touch. Always ensure that all gaskets and sealing surfaces are free of dirt and debris.

LED fixture(s), LED driver(s) and LED electrical components are more precise electrically than standard non LED products (e.g. Incandescent, Compact Fluorescent, H.I.D., etc.). Please follow the following guidelines/requirements when installing LED fixture(s)/LED driver(s).

- 1. Install LED fixture(s) and/or LED driver(s) only on their own circuit. Do not mix any other non LED products/fixtures (e.g., Incandescent, Compact Fluorescent, H.I.D., etc.) with LED fixture(s)/LED driver(s) on a single circuit.
- 2. Do not use any other electrical equipment (e.g., surge protectors, photocells, etc.) that is not (rated) for use with LED fixture(s)/LED driver(s) on the same circuit as LED fixture(s)/LED driver(s).
- 3. Use GFCI's (by others) on each circuit (per installation instructions) appropriate for the installation.
- 4. Install remote surge protector(s) (by others, goes on the circuit with nothing between the surge protector and the LED fixture(s)/LED driver(s)), if the fixture in not already installed with a surge protector, to help remove power surges that may harm LED fixture(s), appropriate for the installation.

Periodically check and make sure that your remote surge protector(s) are in good working order.

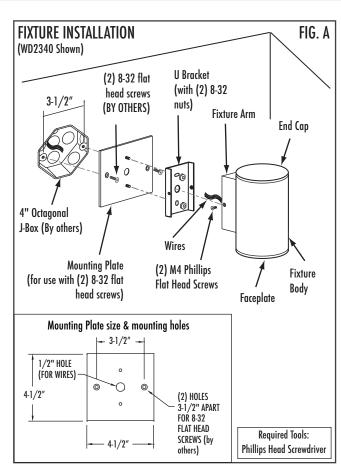

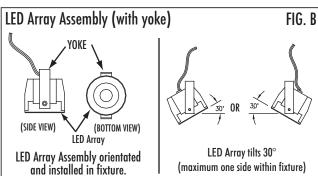

Fixture Installation:

- 1. Make sure supply wiring is in place before mounting fixture.
- 2. Mounting Plate installs directly to a 4" octagonal i-box. Make sure that mounting surface and/or jbox (etc.) can support fixture before installing fixture on mounting surface.
- 3. Remove U Bracket and Mounting Plate from Arm to expose mounting holes on Mounting Plate (see left, FIG. A).
- 4. Use existing holes in Mounting Plate and mount Mounting Plate to a 4" octagonal j-box (by others) with 8-32 flat head screws (by others, FIG. A) and tighten securely. If drilling new holes in Mounting Plate to mount Mounting Plate to a different j-box or directly to mounting surface make sure hardware (by others) on Mounting Plate do not interfere with the U Bracket and/or Arm mounting flat (or flush) to the Mounting Plate. Cover newly exposed metal on the Mounting Plate with an outdoor paint to protect it from the elements (appropriate for the application).
- 5. Secure U Bracket to Mounting Plate with supplied (2) 8-32 nuts and tighten securely. Make sure U Bracket sits flat on Mounting Plate. Adjust U Bracket left or right as needed.

 6. Connect the supply wiring to the fixture. See "Wiring Fixture" instructions below.
- 7. Mount fixture arm securely on U Bracket with two (2) M4 flat head screws and tighten
- 8. Seal'all holes/openings from water entry to junction box, wires, and/or fixture (e.g., Mounting Plate to mounting surface and Mounting Plate to Arm).

Wiring Fixture:

WARNING: Check fixture for input voltage before connecting power to fixture.

- 1. Connect ground wire (green or bare copper/aluminum) from the supply circuit to the ground wire (green or bare copper) /screw/connector from the luminaire.
- 2. Connect the neutral (common) wire from the power supply to the neutral wire from the
- 3. Connect the main voltage supply wire (line/lead) from the power supply to the line (lead) wire from the luminaire.
- 4. Secure connection using UL Listed wire nuts/connectors and then with UL Listed Electrical tape (by others), as required, appropriate for the connection.
- 5. For Dimming wiring see Liton web site.

Adjusting / Tilting LED Array:

Danger: Always disconnect power before wiring, or maintenance.

- 1. Unscrew faceplate and remove from fixture (FIG. A). Keep Oring on faceplate in place.
 2. Tilt LED array to desired angle (30° maximum tilt one side).
- 3. Screw faceplate back on fixture (with 0-ring) securely until facplate is tight and no gap is between faceplate and fixture body to seal out water entry.

Replacing LED array Assembly and LED driver):

Danger: Always disconnect power before wiring, or maintenance.

- 1. Unscrew faceplate and end cap and remove from fixture (FIG. A). Keep oring on faceplate in
- place.
 2. Remove connectors from LED array wires (Red (+) and Black (-))to LED driver wires (Red (+) and Black (-)) and disconnect wires.
- 3. Tilt LED array to one side and remove hardware holding yoke to fixture and remove LED array assembly with yoke. (FIG. B).
- 4. Remove LED driver (not shown) from fixture. Remove any hardware as needed.
- 5. Replace LED array assembly and LED driver in fixture by reversing step 2-4 above and tilt LED array to desired angle (see above Adjusting / Tilting LED array, steps 1 and 2).
- 6. Screw faceplate and end cap back on fixture (with o-ring) securely until facplate is tight and no gap is between faceplate and end cap and fixture body to seal out water entry.

01082019