

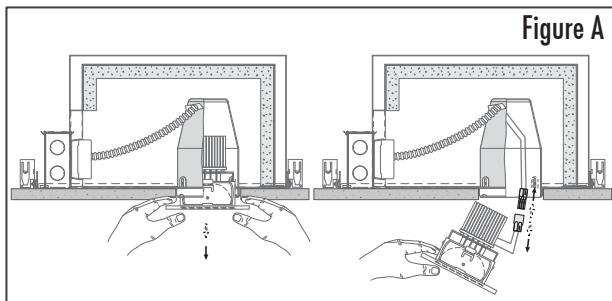


Figure A

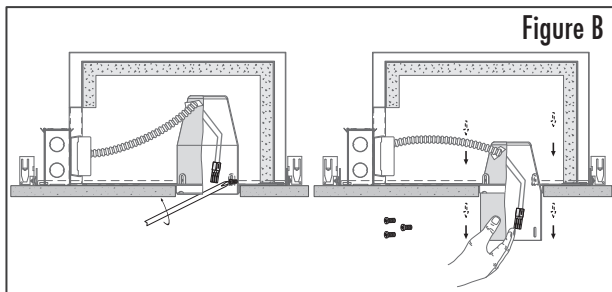


Figure B

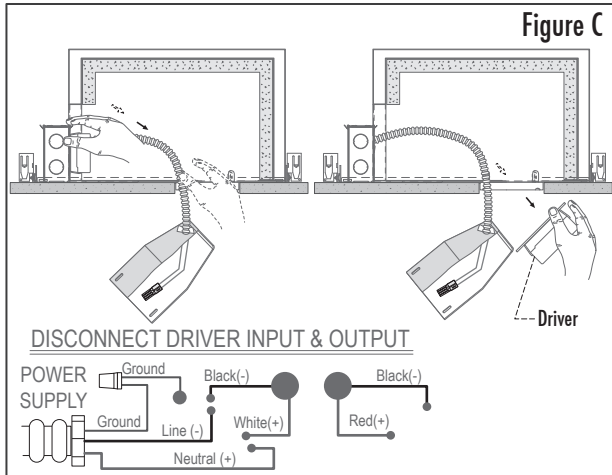


Figure C

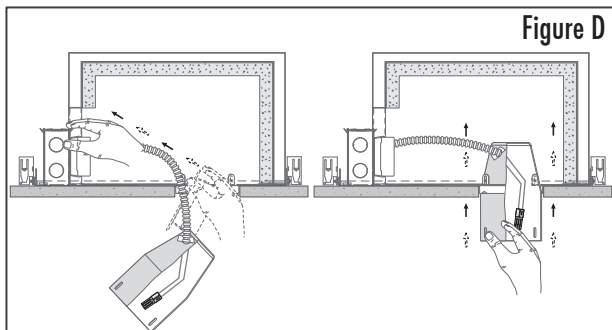


Figure D

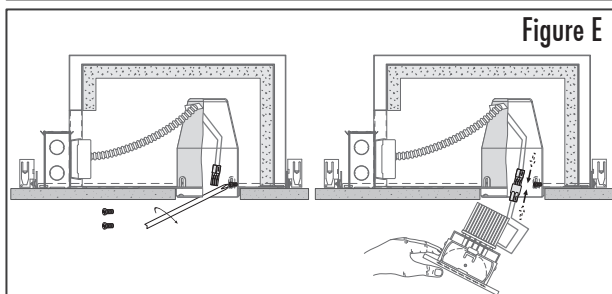


Figure E

INSTALL AND USE THIS LUMINAIRE FOLLOWING YOUR LOCAL ELECTRICAL CODES AND REGULATIONS.

PREPARATION:

1). Read and understand instructions completely before installing this luminaire. If you are unfamiliar with electrical wiring have a qualified licensed electrician install this luminaire for you.

2). Before proceeding the installation, be sure that the ceiling construction follows the proper requirements. See (FIG. B) as per your reference.

CAUTION! NON-IC Luminaire, ceiling insulation must be kept a minimum of 3" away from the sides of the housing. No insulation allowed on the top. Install housing at a minimum of 1/2" away from combustible material such as wooden ceiling joists, sub-flooring or roofing.

A) REMOVE & DISCONNECT TRIM:

1). Pull down and disconnect Trim by quick connectors (provided), see FIG A.

B) REMOVE RECESSED HOUSING:

1). Unscrew Housing then pull it down to make access to the J-Box, see FIG B.

C) REMOVE & DISCONNECT DRIVER:

1). **WARNING-** Before starting the wire disconnections, disconnect the power by turning off the circuit breaker or removing the fuse at the fuse panel. Turning the power off using the light switch is not sufficient to prevent electrical shock.

2). This luminaire must be connected with supply wire rated at 90°C. Most dwellings built before 1985 have supply wire rated at 60°C; consult a qualified electrician before installing this luminaire.

3). Pull J-Box Clip to remove Driver plate, disconnect the Input and Output from Driver.

4). Replace Driver to the J-Box plate and make wire connection, follow Wiring Diagram, see FIG C.

Use twist type wire connectors (by others) suitable for the size, type and number of wires.

D) INSTALL DRIVER & RECESSED HOUSING:

1). After completing the wiring (make sure the wires are placed within the J-Box), replace cover plate with Driver to J-Box, see FIG D.

2). Insert recessed housing into the ceiling opening, see FIG D.

E) INSTALL TRIM:

1). Secure the recessed housing by using the screws (provided) to frame, see FIG E.

2). Connect trim and housing Quick Connectors (provided) and install trim into the recessed housing till trim ring is flush to ceiling surface, see FIG E and FIG A.