

INSTALLATION INSTRUCTIONS FOR 3" SQUARE

Before You Begin! Read these instructions completely and carefully.

Do this FIRST! Failure to do this sequence first may result in a faulty installation and costly rework.

1. Install housing to joists or T-Bar.
2. Loosen Locking Nut (A) inside housing. You may need to loosen the square collar assembly to allow room.
3. Set angle of square by rotating the square collar assembly. Use installed measurement guide.
4. Tighten Locking Nut (A)
5. Review work to make sure that trims are positioned as desired. Make any corrections NOW.
6. When all trim angle adjustments are final you may finish the ceiling.

Adjusting the angle of the lamp and beam:

1. Loosen Angle Adjustment Locking Knob (B) on large bracket inside the housing. You will need to reach into the housing through the trim opening.
2. Move bracket forward or back to the angle you desire.
3. Re-tighten the Angle Adjustment Locking Knob (B).


Adjusting lamp depth:

1. Loosen 2 small thumbscrews (C) located at the bottom of the lamp bracket frame.
2. You will need to reach inside
2. Pull or push lamp bracket up or down to the desired depth.
3. Re-tighten 2 small thumbscrews (C)


Adjusting for different ceiling thicknesses:

1. Loosen 4 retainer screws (D) on the inside of the square collar assembly.
2. Move collar up or down to desired ceiling thickness.
3. Retighten 4 retainer screws (D). Do not over tighten.

*Top View from inside

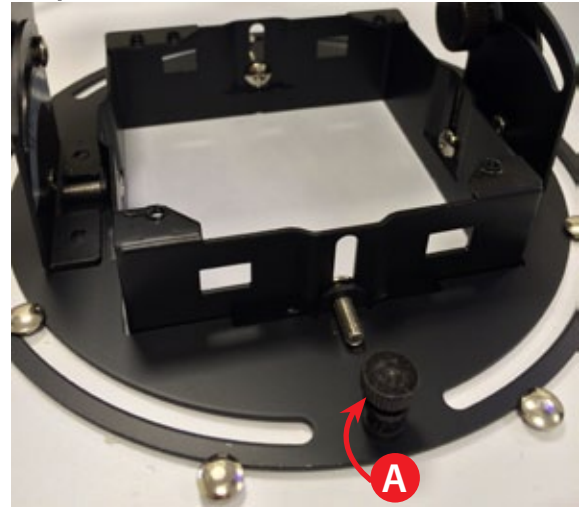

*Inside View

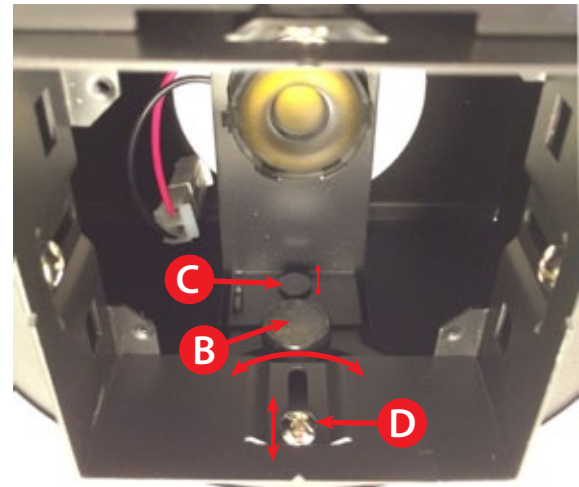

*Final View when adjustment is done.

