
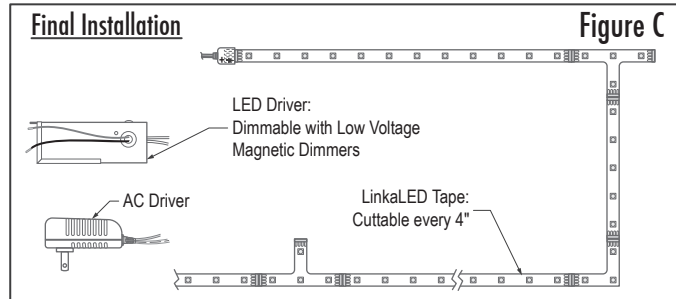
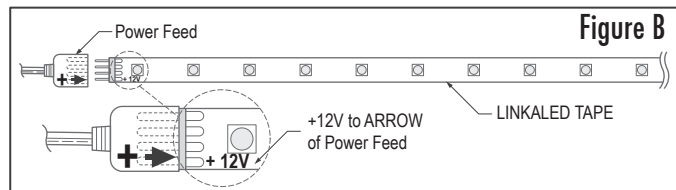


INSTALLATION INSTRUCTIONS for LINKALED TAPE UNDER CABINET CATALOG # : LUTKLED-Series with LD522

SAVE THESE INSTRUCTIONS

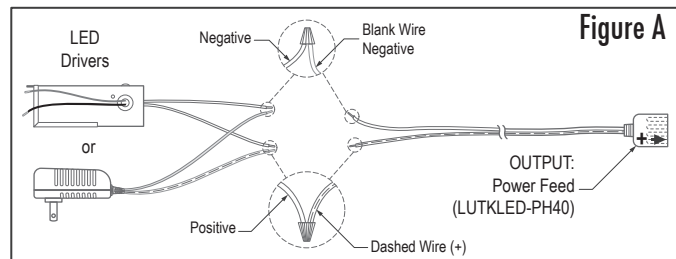

INSTALL AND USE THIS LUMINAIRE FOLLOWING THE NATIONAL ELECTRICAL CODE, YOUR LOCAL ELECTRICAL CODE AND REGULATIONS.

PREPARATION:

1). Read and understand instructions completely before installing this luminaire. If you are unfamiliar with electrical wiring have a qualified licensed electrician install this luminaire.

CAUTION! Use proper input voltage for AC LED Driver.

WIRING LED DRIVER:

Step 1) Wiring LED Driver to Power Feed: Connect the Positive wire from LED Driver to the **Dashed Positive Wire** from the Power Feed, then connect the Negative wire from LED Driver to the Blank Negative wire from the Power Feed, see FIG. A.

Step 2) Layout LinkaLED: Connect LinkaLED sections together using on board male/female connectors, see FIG. C. For mounting to any surface use adhesive on back.

NOTES: ☐ 12V mark must line up on all sections

- ☐ — L connector is used for left turns (facing up)
- ☐ — T connector is used for right turns and run continuations
- ☐ — Maximum recommended run is 20 feet (~60W) per Power Feed
- ☐ — LinkaLED Tape is cuttable every 4"

Step 3) Connect Power Feed to LinkaLED Layout: Make sure arrow of the Power Feed matches the +12V mark on end of LinkaLED Tape, see FIG. B.