


Standard 4 inch J-box and 5 inch J-box




1. Rotate PC lens left to right.

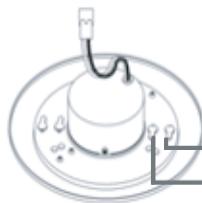

2. Remove either one of Knockouts each side based on size of J-box.

→ 5" knockout
→ 4" knockout

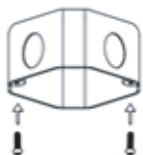

3. Use 1½" 8-32 or ¾" 8-32 screws and screw into J-box.



4. Connect wires of a male connector to input wires.



5. Connect a female connector to the male connector.



6. Insert screws on J-box (#3) into knockout on trim.



7. Rotate trim and fasten screws.



8. Rotate PC lens left to right.


5 inch Can and 6 inch Can





1. Assemble springs with brackets provided.



2. Loosen 4 screws enough (approx. 1.5mm) to allow brackets to be installed.

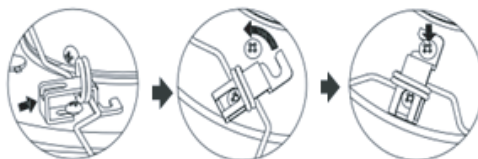

3. Place brackets/torsion spring onto the trim and tighten screws.

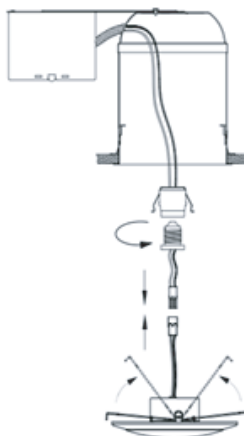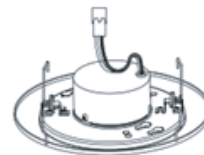

4. Connect a socket adapter.

5. Connect a male and a female connector.

6. Assemble trim on 5" or 6" housing by using torsion springs.